


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0319

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.


Hardware Package(inculded):

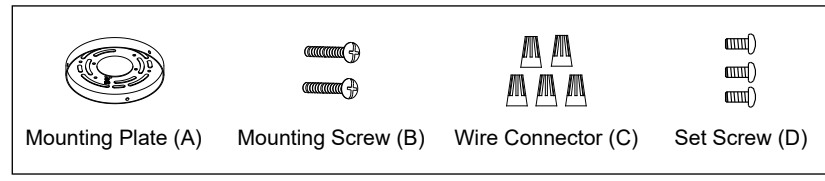

Installation Steps

Turn off the power at fuse or circuit box.


1. The fixture of the top iron tube. put into the metal pad and rubber pad , Through the hole of the upper glass shade, after put a rubber pad use the casting to fix it.
2. Attach the threaded pipe into the coupling of the fixture and secure the hex nut.
NOTE: Depth of threaded pipe may need to be adjusted to properly fit glass shade, rubber pad and finial.
3. Attach the lower glass shade to the fixture by inserting the threaded pipe, then secure it with a rubber pad and finial.
Note: Do not over tighten, breakage of glass shade could be occurred.
4. Attach mounting plate (A) to the outlet box using two mounting screws (B).
5. Rod Connections:
 - a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.**Note: Length adjustable from 19" to 61". Use fewer rods if shorter length is desired.**
6. Thread the fixture wire through the canopy, then secure the rod assembly to the coupling kit of the canopy.
7. Make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the red wire from the driver output.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the black wire from the driver output.

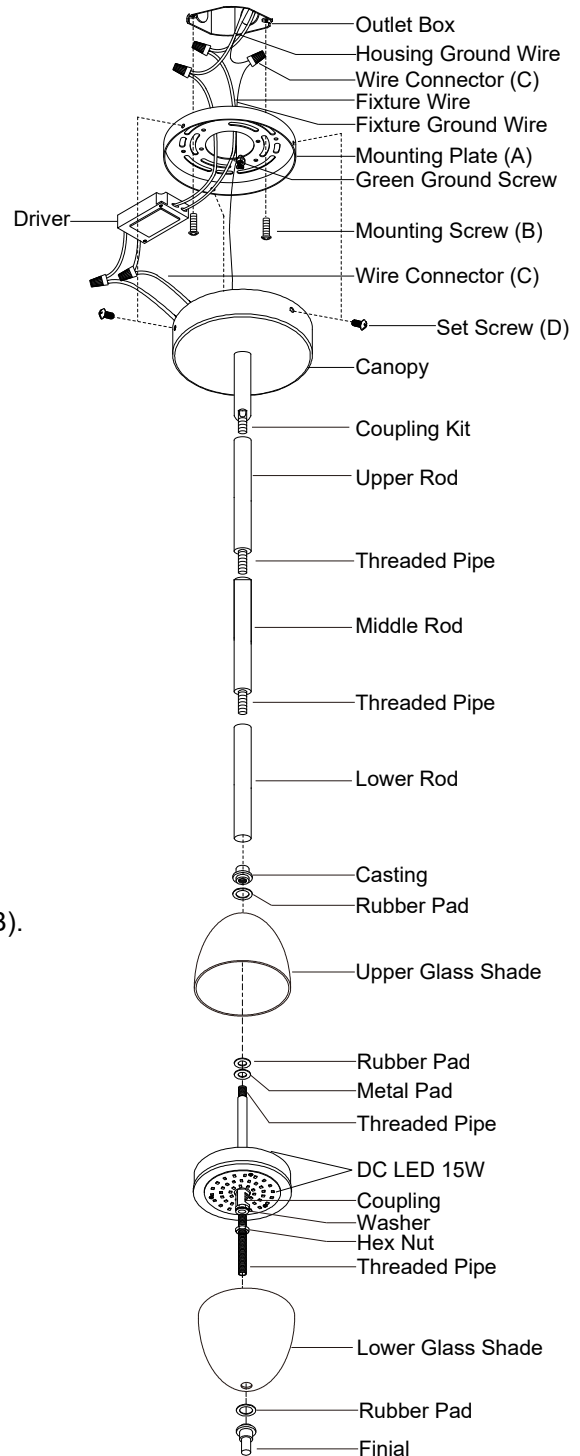

8. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
- Connect the black wire from the driver input to the black wire from the power source.
 - Connect the white wire from the driver input to the white wire from the power source.
 - Attach the fixture ground wire to the mounting plate (A) with the green groundscrew, then connect it to the house ground wire with a wire connector (C).
- Carefully put the wires back into the outlet box.

9. Attach the canopy to the mounting unit by inserting the set screws (D) .
10. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

Turn on the power at fuse or circuit box.

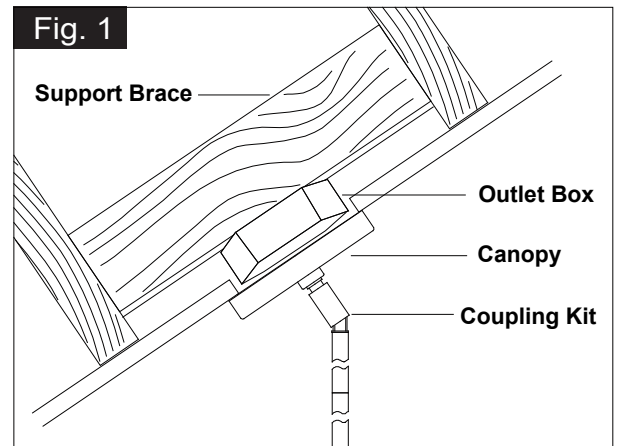


Note: Suggested dimmers are Lutron: MACL-153MH, DVWCL-153PH, TGCL-153PH, SCL-153P.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

				← Mounting Hardware 6178MM(1 SET)
Mounting Plate (A)	Mounting Screw (B)	Wire Connector (C)	Set Screw (D)	

12"Rod X3 3052RD	6"Rod X1 3051RD	3"Rod X1 3050RD	Upper Glass Shade 10123OB	Lower Glass Shade 10123OB

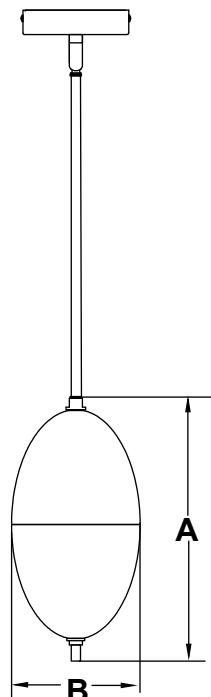

A: 13"

B: 6-1/4"